

Basic Setup Steps

1. Power the module and connect to network.
2. Set IP address on computer to be on the same network as the module. (Example: Set computer to 192.168.1.50)
3. To configure the module, open a web browser and enter:
`http://192.168.1.2/setup.html`
4. Assign permanent IP address to module, then restart module.
5. Restore computer's IP address, if necessary, and access the module at its new IP address to finish setup.

Factory Default Settings

IP Address: 192.168.1.2

Subnet Mask: 255.255.255.0

Control Page Web Address: `http://192.168.1.2`

Control Password: (*no password set*)

Setup Page Web Address: `http://192.168.1.2/setup.html`


Setup Username: admin

Setup Password: webrelay (*all lower case*)

See users manual for setup instructions:

www.ControlByWeb.com/support

X-408 | Pinout Diagram

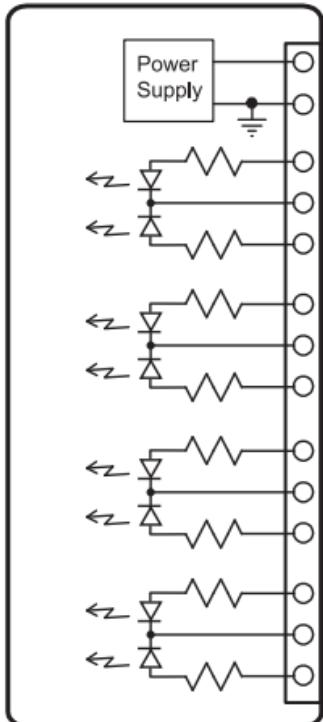

Vin+ Power Supply Input (9-28VDC)

Gnd Power Supply Input (Ground)

In1+ Digital Input 1+

Com Digital Input 1 & 2 Common

In2+ Digital Input 2+

In3+ Digital Input 3+

Com Digital Input 3 & 4 Common

In4+ Digital Input 4+

In5+ Digital Input 5+

Com Digital Input 5 & 6 Common

In6+ Digital Input 6+

In7+ Digital Input 7+

Com Digital Input 7 & 8 Common

In8+ Digital Input 8+