XW-IIO Plus | Quick-Start Guide

- 1. Connect the module to power (Two AA batteries or 5VDC).
- On a computer, scan for open Wi-Fi networks & connect to the SSID: XW110P-[Last six digits of Serial Number]
- 3. If no Wi-Fi network is found called XW110P-[Last six digits of Serial Number], remove the front cover and press the 'Access Point' button for 2 seconds
- 4. Once connected, open a web browser and enter:
 - http://192.168.1.2/setup.html
- 5. Enter local Wi-Fi network settings and power cycle the module.
 - (You can also establish communications using WPS. See users manual.)
- 6. The module will now attempt to connect to the specified Wi-Fi network.
- Reconnect computer to Wi-Fi network and access the module through the Wi-Fi network to finish setup.

Factory Default Settings

SSID: XW110P-[Last six digits of Serial Number]

Control Page Web Address: http://192.168.1.2

Control Password: (no password set)

Setup Page Web Address: http://192.168.1.2/setup.html

Setup Username: admin

Setup Password: webrelay (all lower case)

XW-IIO Plus | Wiring Diagram



