

X-TC1W-K

Thermocouple to 1-Wire Adapter



Quick Start Guide

Installation Instructions:

Install the X-TC1W-K

Install the X-TC1W-K in a protected location away from rain and direct sunlight. The internal cold junction compensation will be more accurate if the X-TC1W-K is protected from rapid temperature changes.

Thermocouple Sensor


Connect the thermocouple sensor into the positive (+) and negative (-) terminals.

1-Wire Connections

The adapter has three wires which are connected to a compatible ControlByWeb device. The cable can be extended with additional wire, if needed.

Sensor Setup:

1. The sensor comes from the factory with a unique, non-changeable address. Once the sensor is connected to the host device, the device must associate a sensor name with the sensor address.
2. After the sensor is added, alarms, email notifications, logging and other options can be configured. For more information about how to configure these options, please consult the host device's users manual.

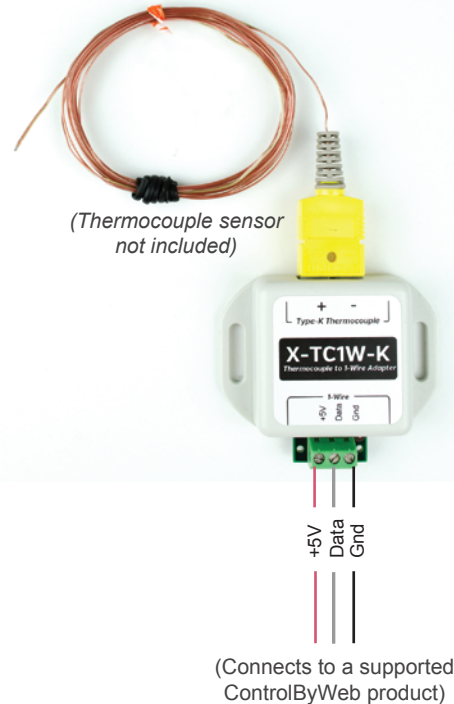

Sensor Specifications:

Thermocouple Sensor:

Sensor Type: Type-K (Must be ungrounded or isolated)
Temperature Range: -200°C to 1250°C (-328°F to 2282°F)
Accuracy: $\pm 0.5^{\circ}\text{C}$

X-TC1W-K:

Operating Range: -40°C to 80°C (-40°F to 180°F)
Humidity: 5-95%, non-condensing

1-Wire:

Operating Voltage: +5.0 VDC $\pm 0.25\text{V}$
Communications Protocol: 1-Wire®

CONTROL by
WEB™
www.ControlByWeb.com

a division of Xytronix Research & Design, Inc.
located in Nibley, Utah, USA