

Basic Setup Steps

1. Power the module and connect to network.
2. Set IP address on computer to be on the same network as the module. (Example: Set computer to 192.168.1.50)
3. To configure the module, open a web browser and enter:
`http://192.168.1.2/setup.html`
4. Assign permanent IP address to module, then restart module.
5. Restore computer's IP address, if necessary, and access the module at its new IP address to finish setup.

Factory Default Settings

IP Address: 192.168.1.2

Subnet Mask: 255.255.255.0

Control Page Web Address: `http://192.168.1.2`

Control Password: *(no password set)*

Setup Page Web Address: `http://192.168.1.2/setup.html`

Setup Username: admin

Setup Password: webrelay *(all lower case)*


See users manual for setup instructions:
www.ControlByWeb.com/support/

WebRelay-10 | Pinout Diagram

Power Supply Input*
9-28VDC

Gnd Vin+

Power LED

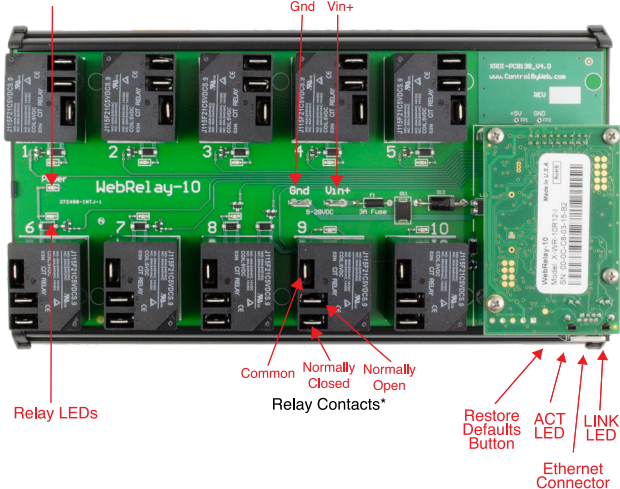

Relay LEDs

Common
Normally Closed
Normally Open
Relay Contacts*

Restore Defaults Button

ACT LED
LINK LED

Ethernet Connector

*Power and relay connections require
1/4" push-on tab terminal connectors