


## Quick Start Guide

### BASIC SETUP STEPS:

1. Connect the module to power and a network.
2. Set up a computer on the same network as the module. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.
3. Configure the module using a web browser.  
Do this by pointing the browser to <http://192.168.1.2/setup.html>.  
Username is **admin** and password is **webrelay** (all lower case).
4. Set the permanent IP address in the configuration page. Restart the module (remove power, re-apply power).  
After restarting the module, set the computer back to its original settings and access the module at its new IP address.



### PINOUT

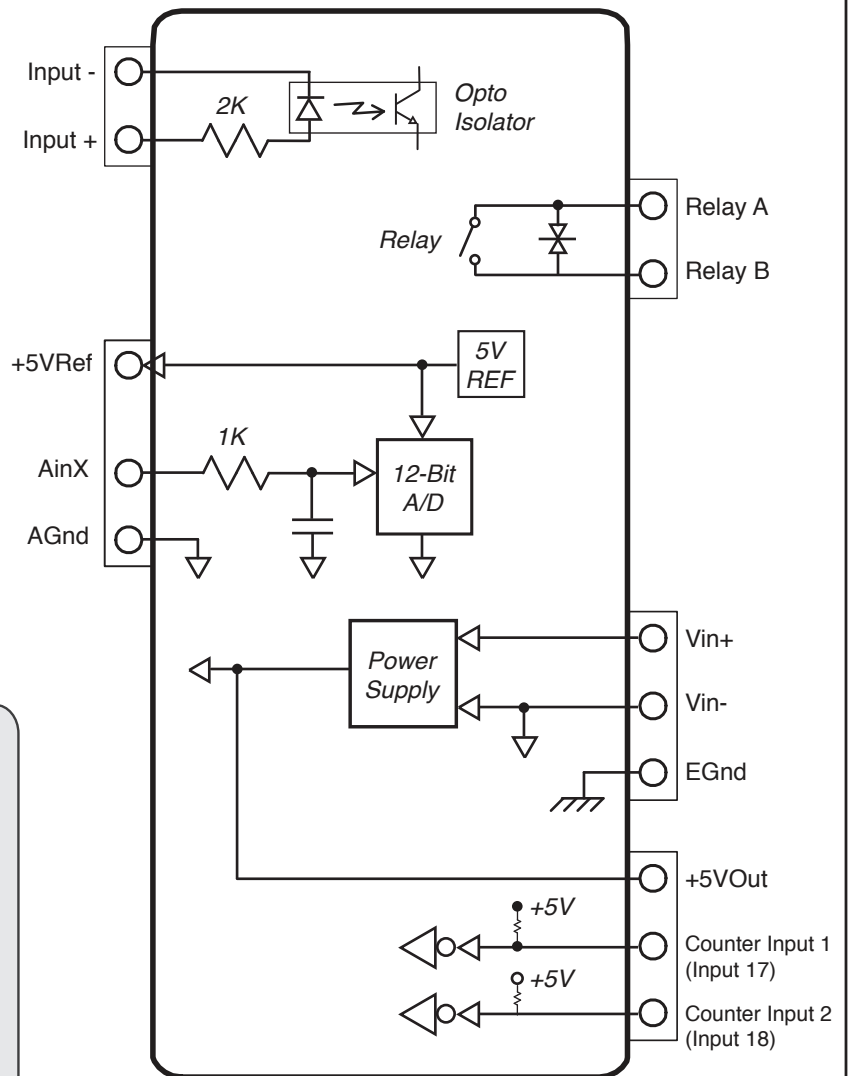

### FACTORY DEFAULT SETTINGS:

**IP Address:** 192.168.1.2  
**Subnet Mask:** 255.255.255.0  
**Control Web Address:** <http://192.168.1.2>  
**Setup Web Address:**  
<http://192.168.1.2/setup.html>  
**Setup Username:** admin  
**Setup Password:** webrelay (all lower case)  
**Control Password:** no password set

Full Users Manual may be downloaded from: <http://www.ControlByWeb.com>

For technical support, email questions to: [support@ControlByWeb.com](mailto:support@ControlByWeb.com)



a division of Xytronix Research & Design, Inc.  
 Nibley, Utah, USA