

## Basic Setup Steps

---

1. Power the module and connect to network.
2. Set IP address on computer to be on the same network as the module. (Example: Set computer to 192.168.1.50)
3. To configure the module, open a web browser and enter:  
`http://192.168.1.2/setup.html`
4. Assign permanent IP address to module, then restart module.
5. Restore computer's IP address, if necessary, and access the module at its new IP address to finish setup.

## Factory Default Settings

---

**IP Address:** 192.168.1.2

**Subnet Mask:** 255.255.255.0

**Control Page Web Address:** `http://192.168.1.2`

**Control Password:** *(no password set)*


**Setup Page Web Address:** `http://192.168.1.2/setup.html`

**Setup Username:** admin

**Setup Password:** webrelay *(all lower case)*

See users manual for setup instructions:  
[www.ControlByWeb.com/support/](http://www.ControlByWeb.com/support/)

# X-4IO | Pinout Diagram

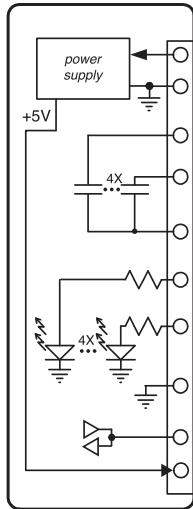

Power

**Vin+** Power Supply Input (9-28VDC)

**Gnd** Power Supply Input (Ground)

Relays

**Rly1** Relay 1 Normally Open

: 4X : 4X

**Rly4** Relay 4 Normally Open

**Com** Common For All Relays

Inputs

**In1+** Digital Input 1+

: 4X : 4X

**In4+** Digital Input 4+

1-Wire Bus

**Gnd** Ground for Inputs & 1-Wire Sensors

**Data** Data

**5Vo** +5VDC Output

Connect temperature or other 1-Wire sensor(s)